ZLED LIGHTING™
ZLEDLIGHTING.COM

EMERGENCY UFO HIGH BAY

INSTRUCTION MANUAL

- Thanks for buying the emergency UFO HIGH BAY, to make sure installing this product in safety way, please read this instruction prior to installation.
- Please do follow up the warnings and precautions related to product safety using.

⚠ Warnings

- Emergency driver Input: AC100-277V & AC100-347V, 50/60Hz.
- Please make sure the correct input voltage or it may cause the fixture damaged if input over rating voltage.
- Make sure operating ambient temperature within 32°F(0°C)-113°F(45°C)
- Fixture life-span will be reduced or fixture is damaged if operating ambient temperature over standard range.
- Please charge the battery for 24hrs before initial using to activate its charge/recharge time.
- Emergency battery should be full recharged one time to avoid damage if stocked in warehouse within one year.

⚠ Cautions

- IP65, suitable for wet environments.
- Do not use the UFO high bay in corrosive environments.
- Emergency driver apply to UFO High bay fixtures under 300W power.

Hook type

1. Hang the emergency driver to hook, lock the safety rope to somewhere be able to hold the emergency driver. If no suitable place, please lock it to the hook.

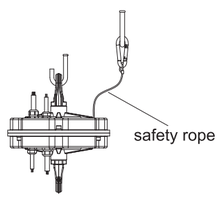

2. Hang the UFO high bay to the emergency driver bottom hook.

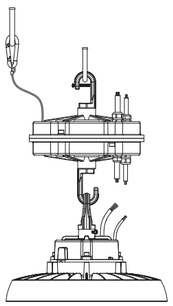

3. Tighten the Screw to lock UFO high bay with emergency driver.

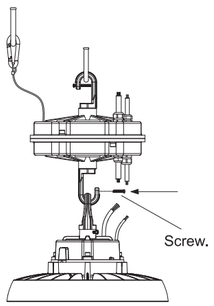

4. Connect the emergency driver output wire to the Driver input wire through waterproof connector.

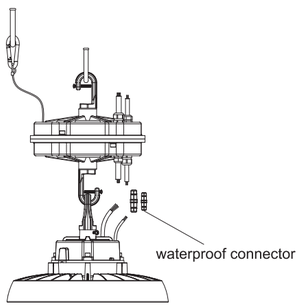

5. Connect the emergency driver input wire to line voltage for the end.

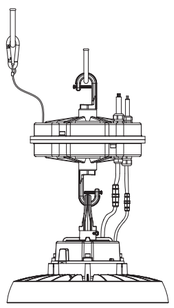

Wiring Connection

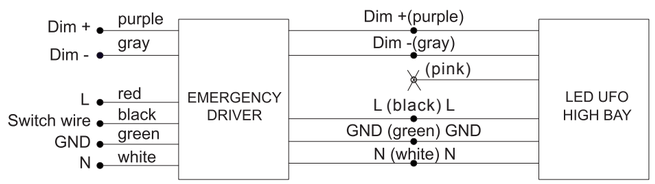

The Installation must be carried out by a qualified electrician.

Wiring Connection

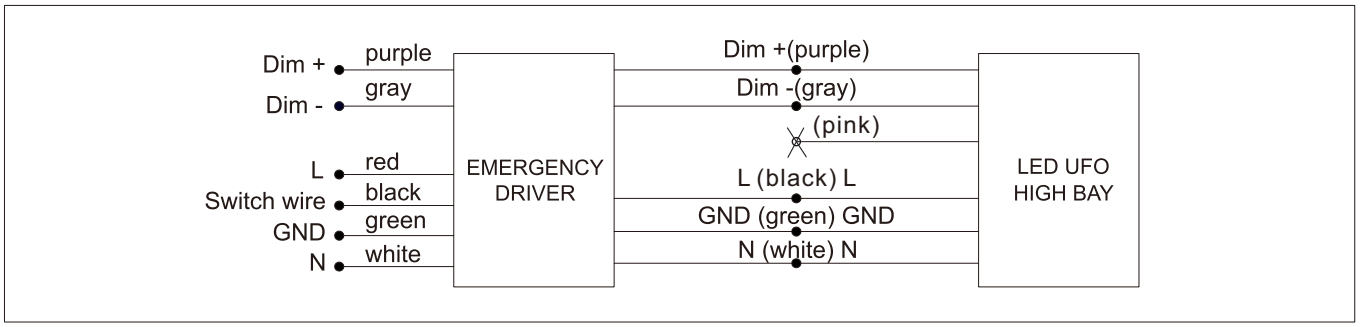

The Installation must be carried out by a qualified electrician.